


bluDock™ Accessory Package




Bluetooth® Wireless Data Transfer for use with Ultrameter II™, Ultrameter III™, PoolPro™, and Digital Dialysate Meter™ Instruments



Model: BLUDOCK
bluDock Accessory Package includes bluDock, Macintosh/PC application software for downloading data and printed instructions.

Wireless Data Transfer



REDUCE DATA LOGGING ERRORS

REDUCE DATA LOGGING TIME

SHARE SAVED WATER SAMPLE DATA

LOSE THE CLIPBOARD AND STILL EASILY COMPLY WITH RECORD-KEEPING REQUIREMENTS

WIRELESS BENEFITS

The bluDock accessory package is an integrated data solution for your record-keeping requirements, eliminating the need for additional hardware, wires and hassle. Because the user never touches the data, there is little opportunity for data tampering and human error. Package includes everything you need to transfer data wirelessly from any Ultrameter II, Ultrameter III, PoolPro or Digital Dialysate Meter to your personal computer via Bluetooth technology. The bluDock software, Guardian², has an easy to use interface with user intuitive functions for storing, sorting and exporting data.

PRODUCT HIGHLIGHTS

- Automatically organizes data by record number; measurement parameter; value and units; solution mode; temperature; date; and time.
- Export data files to spreadsheet formats such as Microsoft Excel® (.xls and .xlsx) or universal formatting (.csv) files.
- Save data files in a secure, encrypted format (.mlcx)
- Catalog data by source by assigning instrument name.
- Set instrument time and date.
- Clear instrument memory.
- Easy to install software available at www.myronl.com.


The bluDock's Guardian² application will operate on Windows® 7 or later and macOS® 10.13 or later with Bluetooth capability. If you are running an older operating system, contact the Myron L® Company.

NOTE: The bluDock module is a fully qualified Bluetooth 2.1/2.0/1.2/1.1 module +EDR for 2.0 and 2.1.

LIMITED WARRANTY

All Myron L® bluDocks have a Two Year Limited Warranty. Warranty is limited to the repair or replacement of the bluDock only, at our discretion. The Myron L® Company assumes no other responsibility or liability.

The Bluetooth word mark and logos are registered trademarks of Bluetooth SIG, Inc. and any use of such marks by Myron L® Company is under license. Other trademarks and trade names are those of their respective owners.

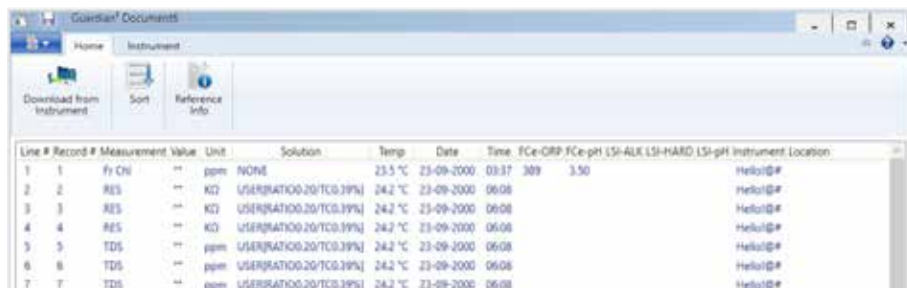

Line #	Record #	Measurement	Value	Unit	Solution	Temp	Date	Time	FCe-ORP	FCe-pH	LSI-ALK	LSI-HARD	LSI-pH	Instrument	Location
1	1	Ft Clr		ppm	NONE	23.5 °C	23-09-2000	03:37	309	3.50				HelloID#	
2	2	RES			KCl USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	
3	3	RES			KCl USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	
4	4	RES			KCl USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	
5	5	TDS		ppm	USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	
6	6	TDS		ppm	USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	
7	7	TDS		ppm	USERPRATIO0.20(TCO.39%)	24.2 °C	23-09-2000	06:08						HelloID#	

Myron L® Guardian² Data Window Displaying Records



Guardian² Tool Panel

2450 Impala Drive
 Carlsbad, CA 92010-7226 USA
 Tel: +1-760-438-2021
 Fax: +1-800-869-7668 / +1-760-931-9189
www.myronl.com

Built On Trust. Founded in 1957, the Myron L® Company is one of the world's leading manufacturers of water quality instruments. Because of our commitment to product improvement, changes in design and specifications are possible. You have our assurance any changes will be guided by our product philosophy: accuracy, reliability, and simplicity.

MYRON L®
COMPANY
 Water Quality Instrumentation
 Accuracy • Reliability • Simplicity