

# RO-CHECK™ - MODEL RG

## POU TDS Monitor



Note: Faucet Not Included

### FEATURES / SPECIFICATIONS

- **High-Tech Liquid Crystal Display**
- **Fits 1.250 in. diameter faucets**
- **Runs one year continuously on one 9V alkaline battery (not supplied)**
- **16 TDS set points, 30-750 ppm, suitable for almost any water**
- **±10% accuracy at 20°C/68°F**
- **Single flow-through cell**
- **316SS electrodes double-sealed to prevent leaks**
- **Includes Parker Hannifin fitting for 1/4" tubing**
- **5 ft. cable with fast telephone-type connector**
- **One-year limited warranty**


### HOW IT WORKS

The innovative Myron L RO-CHECK (U.S. Patent #4,762,611) reliably monitors total dissolved solids 24 hours a day. A quick glance at the display assures RO users of their water TDS quality. This device is ideal for home, office, RV or boat water treatment systems. Should membrane failure or other problems cause TDS to rise above the set point, the words "CHECK SYSTEM" flash in the LCD. This silent indicator alerts, rather than alarms, the user that service may be required.

Easily installed on most popular faucets, the RO-CHECK features 16 set point choices and is ideal for monitoring water for almost any TDS quality.

For more information, please visit our website. [www.myronl.com](http://www.myronl.com)

### TWO DISPLAY MODES

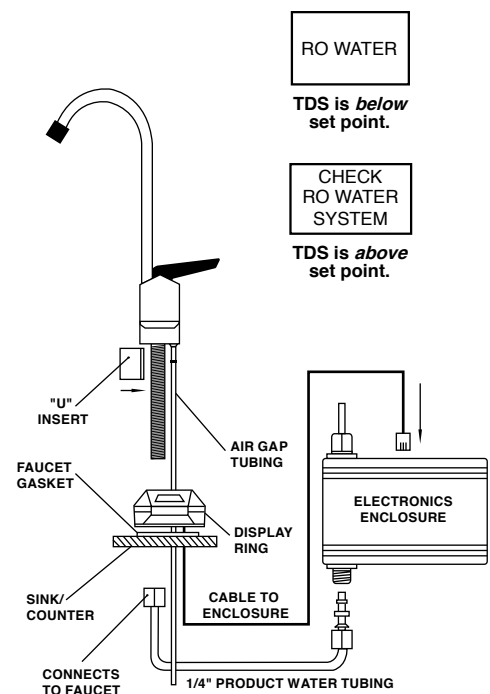

### TYPICAL INSTALLATION

2450 Impala Drive  
 Carlsbad, CA 92010-7226 USA  
 Tel: +1-760-438-2021  
 Fax: +1-800-869-7668 / +1-760-931-9189  
[www.myronl.com](http://www.myronl.com)

**Built On Trust.** Founded in 1957, the Myron L® Company is one of the world's leading manufacturers of water quality instruments. Because of our commitment to product improvement, changes in design and specifications are possible. You have our assurance any changes will be guided by our product philosophy: accuracy, reliability, and simplicity.

**MYRON L®**  
**COMPANY**  
 Water Quality Instrumentation  
 Accuracy • Reliability • Simplicity